




Tribe 16 JL Console Molle Panel

Included in Kit:

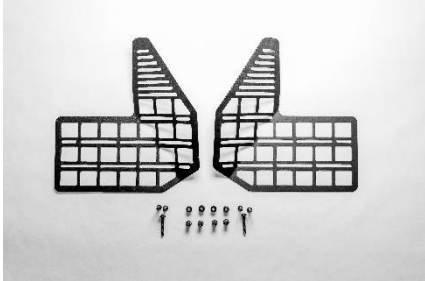

Console Molle Panel	2
1/4-20 X 1" Button Head Screw	4
1/4 Washer	4
1/4-20 NutZert	4
6mm - 1.0 - 40 SCREW	2
6mm - Washer	2

Tools Needed:

- 10 MM Socket and Ratchet
- 1/4 and a 25/64 Drill Bit and Drill
- 5/32 & 3MM Allen
- Flat Blade Screwdriver or Panel Tool

The installation of the Tribe 16 Console Panel requires some drilling and the installation of 4 Nutzerts but is quite simple.

Remove the plastic bolt cover from the side of the console prying it with a panel tool or flat blade screw driver. (Fig.1) Drill a 1/4 inch hole in the center of the cover and remove the 6mm bolt with your 10mm socket and ratchet. (Fig.2) Through the lowest accessory rail slot 2nd back from the front (Fig.3) assemble your first fastener. Bolt, washer, panel, spacer, bolt cover, and spacer and loosley tighten up the panel. (Fig.4)



Fig.1



Fig.2

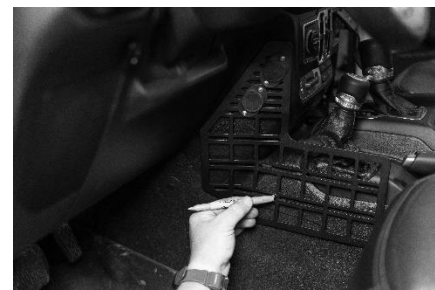


Fig.3

Line the panel up square to the console and mark the spots to drill for the nutzerts at the furthest parts of the panel you can easily get to. (Fig.5) Use your 25/64th drill bit to drill where you have marked (Fig.6) and set your nutzerts. (Fig.7)



Tribe 16 JL Console Molle Panel



Fig.4



Fig.5



Fig.6

With your 5/32 Allen Wrench install your 1/4-20 button head and washer in the nutserts you just installed and tighten up the one in the middle. Now you can out fit your console panel with any accessories or storage you need close at hand



Fig.7



Fig.8



Fig.9