




Tribe 16 JL Molle Door Panel

Included in Kit:

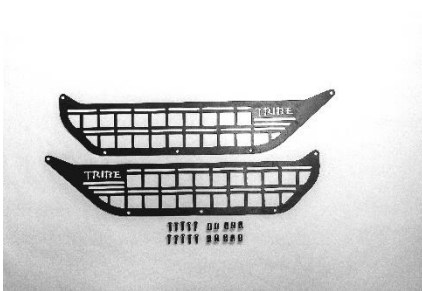

Door Molle Panel	2
1/4-20 X 1" Button Head Screw	4/5
1/4 Washer	4/5
1/4-20 NutZert	4/5

Tools Needed:

Wire Cutters
Pilot and a 25/64 Drill Bit and Drill
5/32 Allen Wrench
Marker

The installation of the Tribe 16 Door Panel requires some drilling and the installation of Nutzerts but is quite simple. These instructions will cover front and rear installations as they are similar, the only variance is the number of fasteners.

If the factory mesh in your door panel is still intact you will have to cut it out, simply pull upward on it and cut it as close to the surround as possible. You will see its barely woven in to the surround and will com out easisly as you cut along the frame. (Fig.1) With the mesh all out hold the panel up to the surround, with it centered on the surround mark your holes. (Fig.2) Pull the panel off and drill pilot holes with your small bit, then the final hole with your 25/64 bit. (Fig.3)



Fig.1



Fig.2



Fig.3



Tribe 16 JL Molle Door Panel

Next Set your nutzerts in the holes you just drilled. (Fig.4) Install all of the $\frac{1}{4}$ -20 Button heads, then tighten them down with your 5/32 Allen wrench.



Fig.4



Fig.5



Fig.6

Outfit your door panel inside and out with any accessories you need close at hand (Fig.6)