




Tribe 16 Front JL/JT Para Panel Install

Included in Kit:

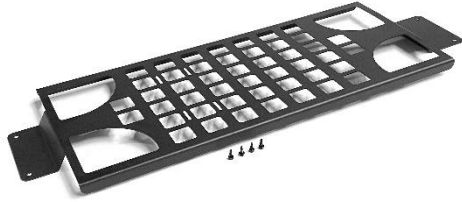

| | |
|------------------------------------|---|
| Front JL Para Panel | 1 |
| #8 x 1/2" Hex Washer Head Self-Tap | 4 |

Tools Needed:
¼ Socket and Driver
Marking Tool
Tape Measure

The install of the Tribe 16 JL/JT Front Para Panel is quick, easy, and works with all tops. We have heard of instances where some overhead switch panels interfere with the install of the front foot on the Para panel, check for interference before installing your self-taping screws.



(Fig.1)



(Fig.2)



(Fig.3)

Pull the front hard tops or roll back the front of the soft top. Lay the Panel on top of the sport bar and windshield frame. Using a tape measure, find the center of the windshield (Fig.1), and the center of the sport bar. (Fig.2) Once you have the panel centered, drive the 4 self-taping screws through the holes in the panel. (Fig.3) The steel used in the newer JL/JT is quite hard so it will take some force, but they will eventually drill in and secure your panel.